



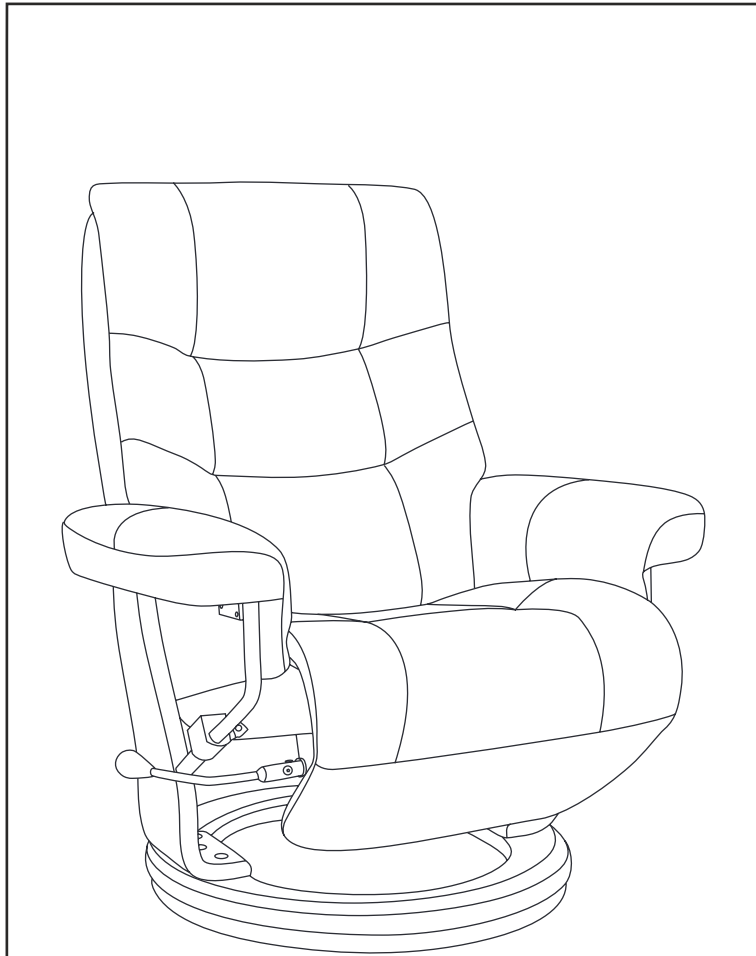


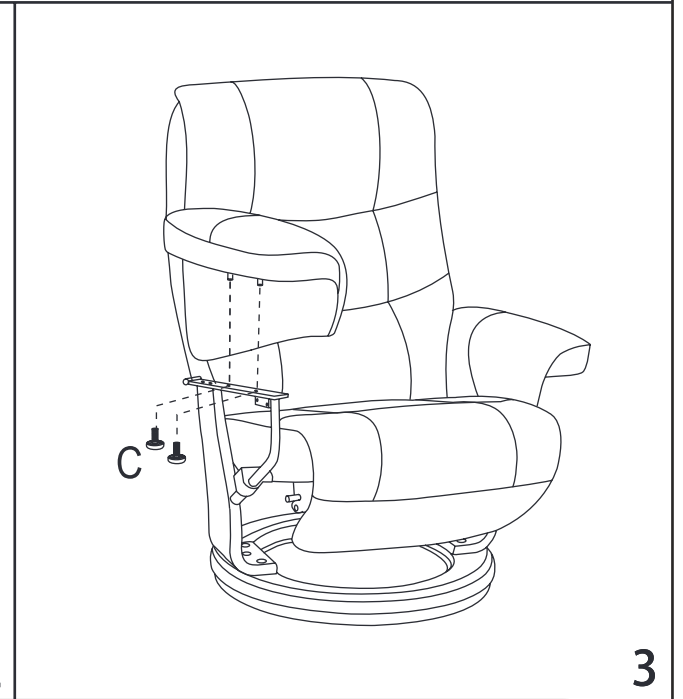
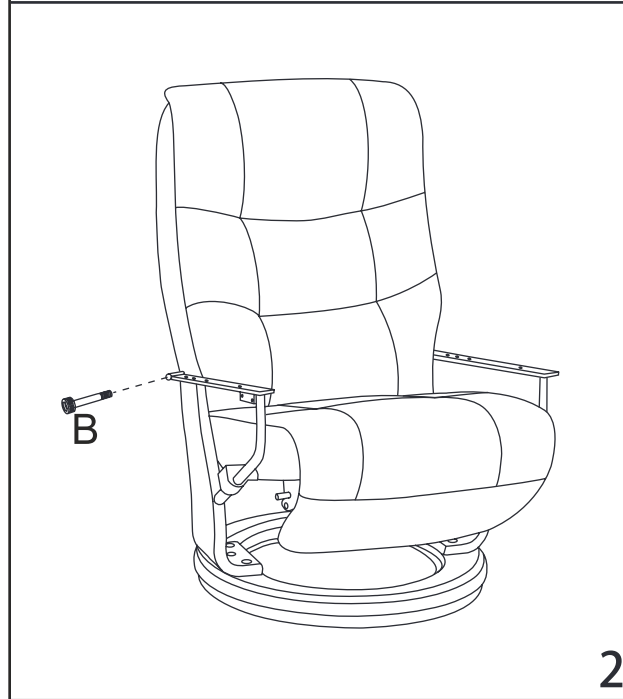
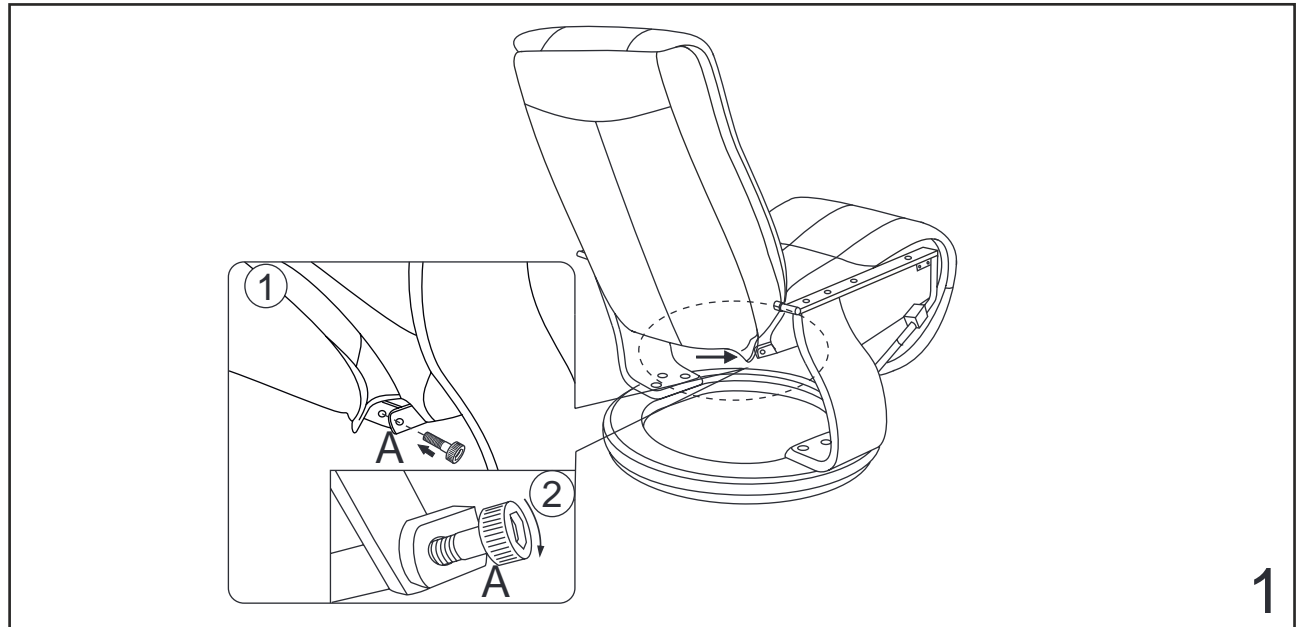




# 7583 WQ






DURING ASSEMBLY CHECK AND TIGHTEN ALL BOLTS

<b>A</b>	 M8X35	2PCS	<b>D</b>	 1PC	
<b>B</b>	 M8X70	2PCS	<b>E</b>	 M6X16	2PCS
<b>C</b>	 M6X20	4PCS	<b>F</b>	 1SET	



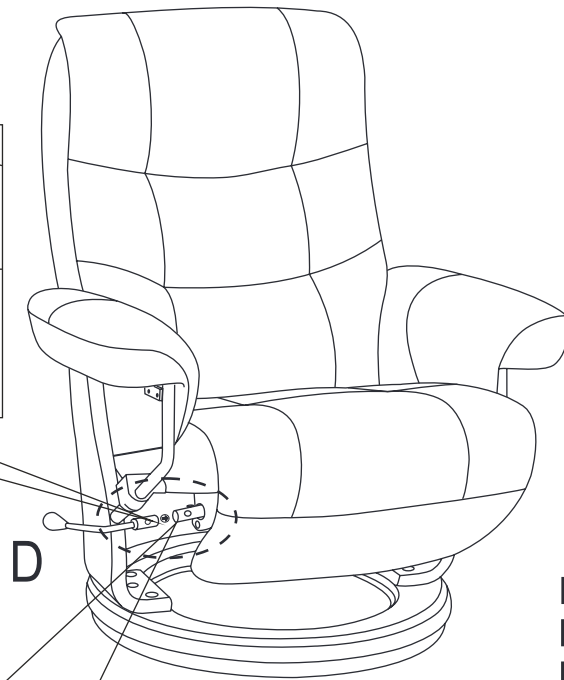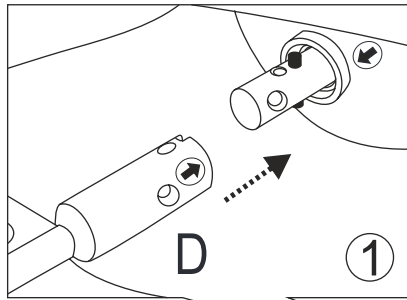


Be sure to push the handle to this position before you assemble the second bolt

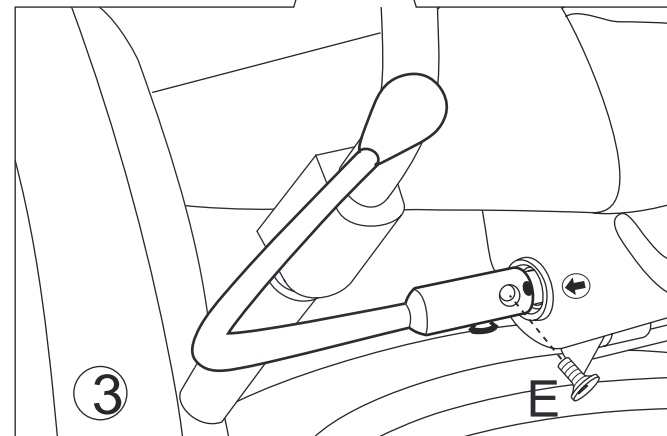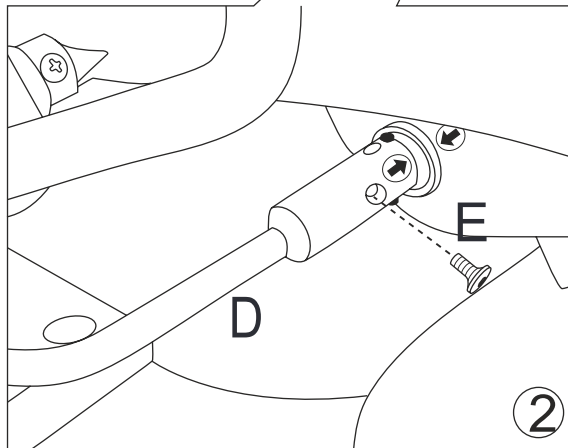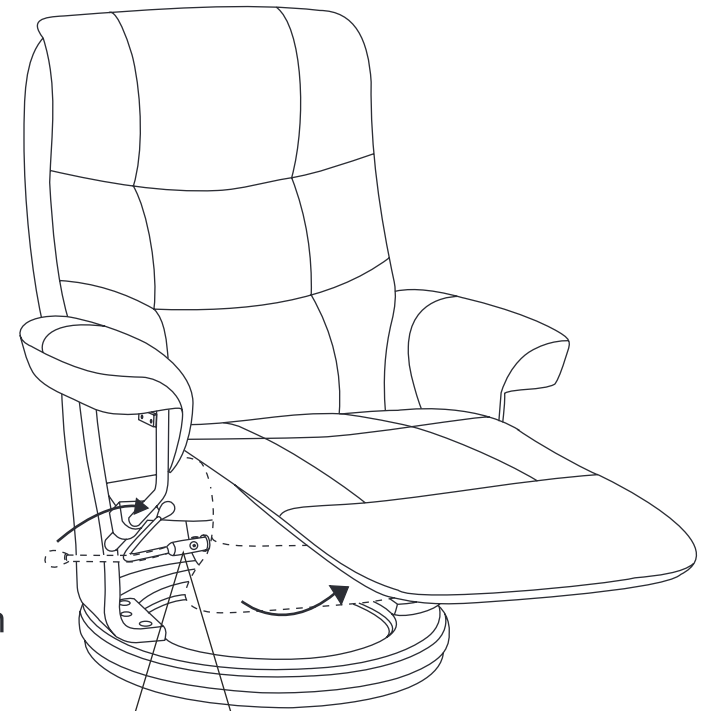

# Recliner Position Control

Hold and Release:

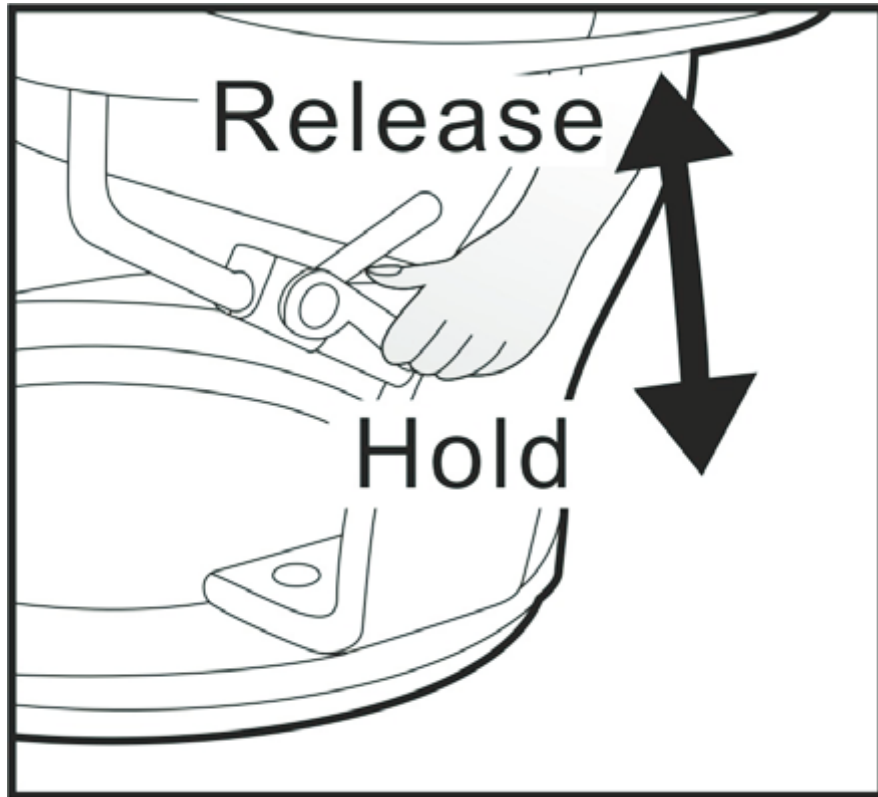

Caution:

Avoid placing hand between lever and frame.

